


KX-NS Step by Step Guide

Note for Software Update

Specifications are subject to change without notice.

1. Software Upgrade


External USB memory or SD card KX-NS31xx is required as temporal memory when software is updated.

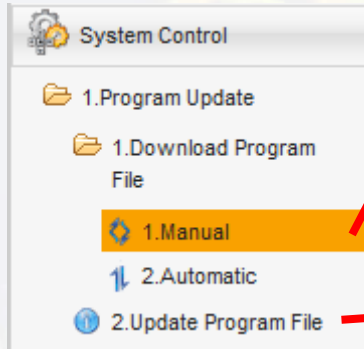

Step 1 :
Copy latest software from
PC to the temporal memory.



Step 2 :
Activate the software.

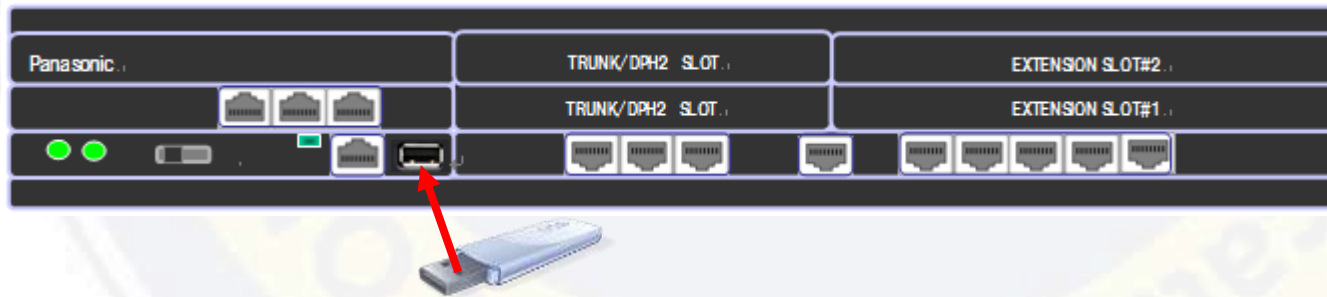

KX-NS3134	SD(XS)	Built-in KX-TVM recording time : 40H
KX-NS3135	SD(S)	Built-in KX-TVM recording time : 200H
KX-NS3136	SD(M)	Built-in KX-TVM recording time : 400H



Thank you !

Revision

Date	No. (*)	Change
Jan 14	-	First edition